

DING ALL SunCure®



SUN CURE- ULTRA WHITE FILLER is a lightweight, fast curing white filler used to fill large voids that cures in "minutes" when exposed to the sun. **SUN-CURE** requires no mixing or adding cloth and can cure in any temperature. **SUN-CURE** produces a tack-free surface that can be sanded in minutes.

APPLICATION INSTRUCTIONS: (Ultra White Filler requires a surface coat of resin to seal pores)



1. Clean the repair area and rough sand surrounding area.
2. IN THE SHADE, apply SUN-CURE to the repair.
3. Tape plastic coversheet over the repair
4. EXPOSE TO THE SUN:

Bright Sun: full cure 3 to 5 minutes

Partial Sun: full cure 5 to 7 minutes

Lt. overcast: full cure 7 to 10 minutes
(note: Expect a slower cure during winter)

WARNING: Contains Polyester resin and Styrene Monomer. Keep away from heat or flames. Store in a cool place. Harmful VAPOR, Avoid prolonged breathing of vapor. Harmful if ingested, if ingested, consult a physician. Irritant to SKIN and EYES. In case of contact flush area with plenty of water. SUN-CURE cleans up with acetone. **KEEP OUT OF REACH OF CHILDREN.**

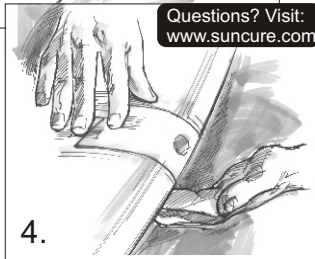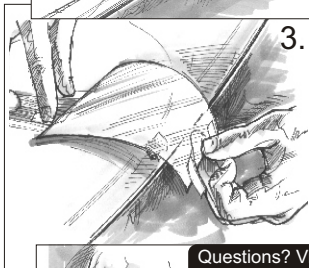

Questions? Visit:
www.suncure.com

the
**Surf
Source**

Made in U.S.A.

www.surfsource.net